

www.maxthermo.com

Operation Example

2012/12/21



www.maxthermo.com

MT HMI - Panel Setup / Run AP

	General
Panel Setup ^{中文} (繁體) (简体)	Check Battery: True 🔶 🕂
General Link1 Copy AP to Boot from File	Screen Saver Time (minutes): 20
Touch Panel Link2 Copy AP to File File	Allow To Run Panel Setup: True
Set Time/Date Copy File Clear Copy File	Communications Setting: Default
Fornat lisk C	Start-up Language: Default
FTP Setting Run	Run AP After Power On: True
H/W LAN Printer Information Address	Display Upside True : Run AP
MflXTECH	IP Address: 192 False : Panel Setup
	Subnet Mask: 255 255 0
Remark : MT043 / MT056 / MT070 / MT080 / MT100 / MT104 Type use	LCD Brightness OK Increase Decrease Save Cancel



www.maxthermo.com

MT HMI - Panel Setup / Run AP



Remark : MT035 / MT037 / MT057 / MT058/ MT070-WAT / MT080-TNT / MT0104-TNT/ MT121 Type use (No DIP Switch Model)

2012/12/21



2012/12/21



www.maxthermo.com

MT HMI - Run AP to Panel Setup





Remark : MT035 / MT037 / MT057 / MT058/ MT070-WAT / MT080-TNT / MT0104-TNT/ MT121 Type use (No DIP Switch Model)

2012/12/21

Power On

Buzzer = On

Maxthermo-Gitta Group Corporation

Exit

MT HMI – Update OS (Step2) Update OS0 through BIOS Undate OS0 through BIOS 3 MT035-TNT (Color/Ethernet) Panel Model: Panel Model: 画 Maxtech Designer - C:\Documents and Settings\FAN\桌面\test.pm2 MT035-TST (Color) Link Setti Link Settings MT035-TNT (Color. MT037-LSK (Mono/Kev) <u>File Edit View Screen Draw Object Project Panel Tools Window Help</u> MT037-LST (Mono) MT037-LNT (Mono/Ethernet) Port: Language Selection Port: 🖻 🔒 🔛 🖫 MT057-LSK (Mono/Kev) D MT057-TSK (Color/Kev) MT057-BST (Mono) MT057-LST (Mono) W **E** (iii) 153 B F1 🛨 4 Þ 4 Þ • | ≢ OFF Run Offline Simulation MT057-BNT (Mono/Ethernet) Statu: Status Run Online Simulation Panel Model Setting 7 MT080-VNT (Ethernet) Set Transparent Communication. MT084-TNT (Ethernet) 帛 ·마· 100 車 MT104-TNT (800x600; Ethernet) Start Transparent Communication MT104-VNT (Ethernet) MT121-TNT (Ethernet) Cancel 4 ML035-TST (Color) End Transparent Communication ML037-LST (Mono) Project Manager | Text Database | I/O] < > = × TEST ML057-BST (Mono) ML057-TST (Color) ML058-BST (Mono) 🖃 👺 test Update OSO through BIOS ML058-TST (Color) m TEST 🛓 👰 Global MT043 (480x272) MT056 (320x234) 😑 回 TEST MT070 (800x480) Export Text... MT080 (800×600 😑 😻 Links 🧼 Internal Memory Import Text.. 🚡 Linkl Update OS0 through BIOS Update OS0 through BIOS TextEditor 👜 Tags Δ Panel Model: MT035-TNT (Color/Ethernet) Panel Model: MT035-TNT (Color/Ethernet) Sound Table 🔊 Setup Link Settings Link Settings 🔙 General Setup BT Port (COM10) Port ~ Port: Prolific USB-to-Serial Comm Port (COM3) ~ BT Port (COM10) BT Port (COM11) Status Link Port Setting Status Completed BT Port (COM21 BT Port (COM6) BT Port (COM7 Motorola SM56 Data Fax Modem Update Close Update Close

Maxtech Designer Maxtech SCADA



www.maxthermo.com

2012/12/21



www.maxthermo.com

MT HMI – HMI (.PRP) File to USB Disk



2012/12/21



www.maxthermo.com

MT HMI – USB Disk (.PRP) File to HMI

Panel Setup 正見話h 中文 (繁鬱) 中文 (備体) General Link1 Copy AP to HMI Boot from File Touch Panel Link2 Copy AP to File Opdate from File Set Time/Date Copy File Clear Goorded Fornerisk C FTP Setting Run H/W LAN Printer Address Run								
General Link1 Copy AP to HMI Boot from File Touch Panel Link2 Copy AP to File Opdate from File Set Time/Date Copy File Clear Reporded Set Time/Date Formation Formation H/W LAN Printer Address Run		Panel Setup English 中文 (資体)						
Touch Panel Link2 Copy AP to File Opdate from File Set Time/Date Copy File Clear Reported Fornation Fornation Run H/W LAN Printer Address Run		General	Link1	Copy AP to HMI	Boot from File			
Set Time/Date Copy File Clear Copy Form isk C FTP Setting Run H/W LAN Printer Information Address Mft Cft		Touch Panel	Link2	Copy AP to File	Update from File			
Forner isk C FTP Setting Run H/W LAN Printer Address Mfl Tt Cfl		Set Time/Date		Copy File	Clear Recorded			
FTP Setting Run H/W LAN Printer Information Address MflXTtCtl				Fornat Disk C				
H/W LAN Printer Information Address MflXTECtl				FTP Setting	Run			
MflXTECH		H/W Information	LAN Printer Address					

Select File Write OS and AP to file E:\ <C:> <E:> Copy.PRP 1 "C:\" Indicates the flash disk. "D:\" Indicates the micro SD card. "E:\" Indicates the USB disk. PRP

"Download AP & OS"

2012/12/21



www.maxthermo.com

MT HMI – Copy File (HMI to USB) or (USB to HMI)





www.maxthermo.com

MT HMI – Use the USB Disk File \rightarrow **Run AP**





www.maxthermo.com

MT HMI – Format Disk C (Flash Disk)



2012/12/21



www.maxthermo.com

MT HMI – Clear Recorded Data



2012/12/21



www.maxthermo.com

MT HMI – Copy AP to HMI





www.maxthermo.com

MT HMI – Installing USB Cable Driver to PC



2012/12/21